



Quick Connection Guide


getting ready to work
meat injector gun

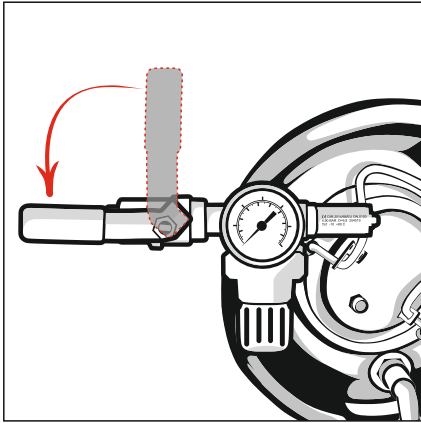


1. Screw the reducer to the tank with a 19 mm wrench and open the ball valve.

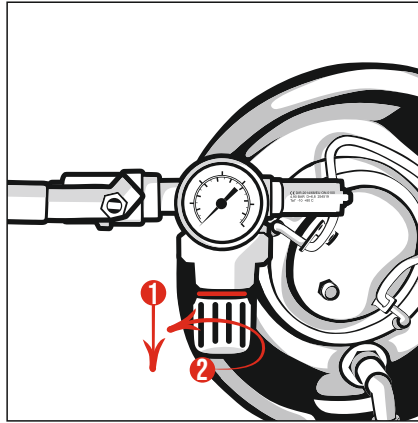


2. Pull the reducer knob with your hand, then turn it counter-clockwise all the way (the reducer knob is often factory unscrewed).

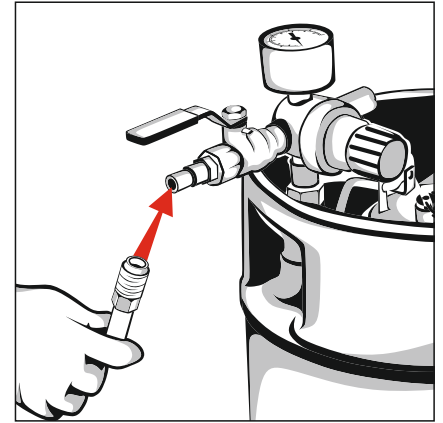


3. Connect the air supply hose to the compressor. It is recommended to use an oil-free compressor.

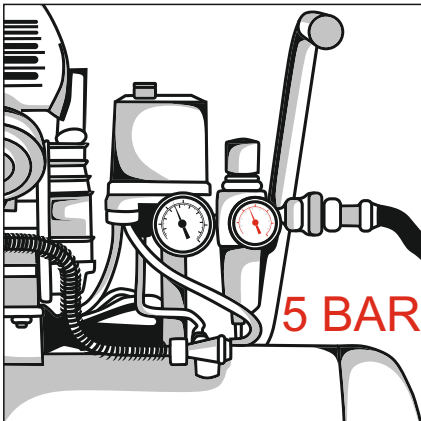


4. Set the pressure on the compressor to 5 BAR. You can also use a small electric compressor.

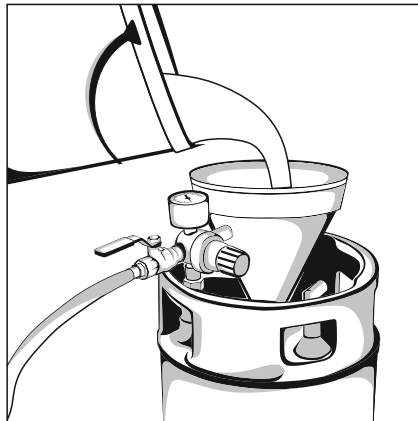


6. Pour the prepared brine solution into the tank.

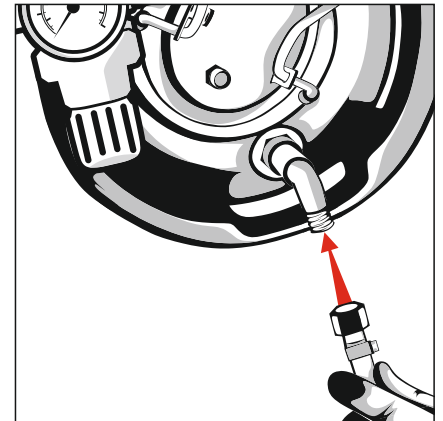


7. Connect the material hose to the tank.

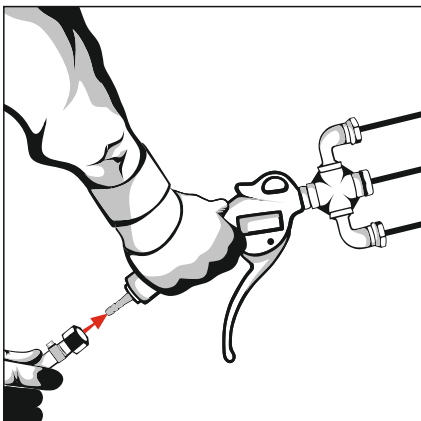

8. Connect the material hose to the gun.

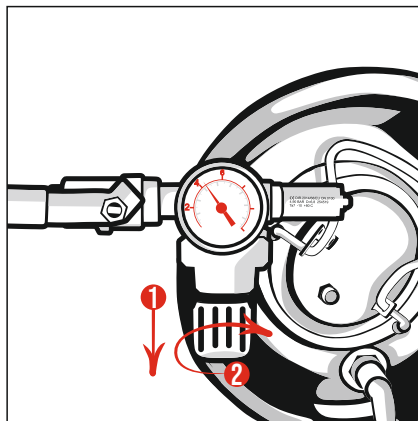

9. Set the tank pressure to a value within the range of 1.5 - 2.5 BAR.

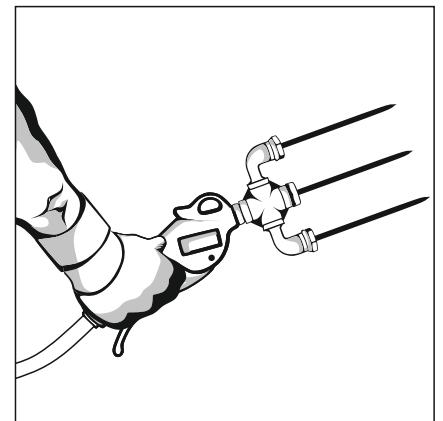

10. You can start working