



Quick Connection Guide


getting ready to work
foamer

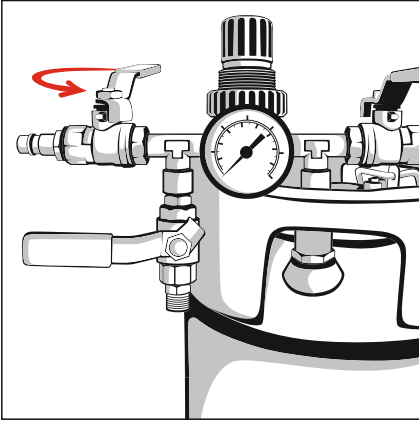


1. Screw the reducer to the tank with a 19 mm wrench and open the ball valve.

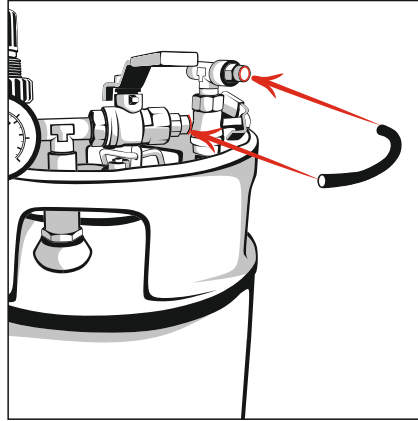


2. Attach the blue hose.

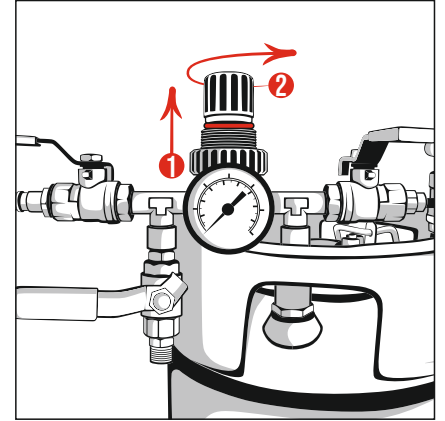


3. Pull the reducer knob with your hand, then turn it counter-clockwise all the way (the reducer knobs are often factory unscrewed).

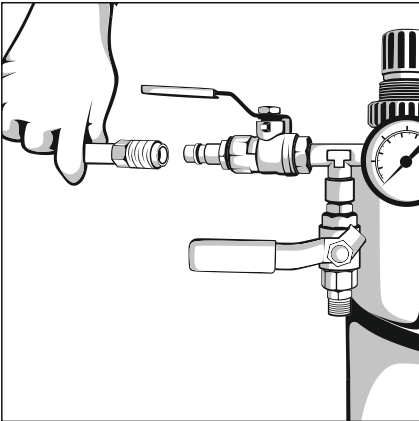


4. Connect the air supply hose to the compressor.

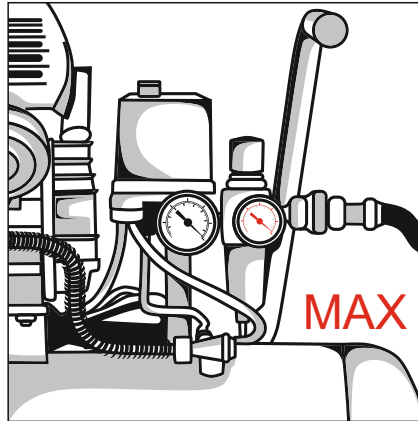


5. Set the maximum pressure on the compressor.

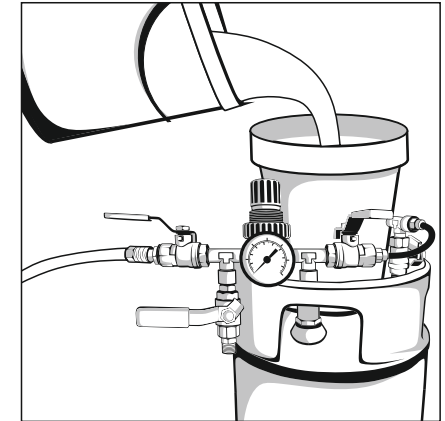


6. Pour the prepared solution into the tank.

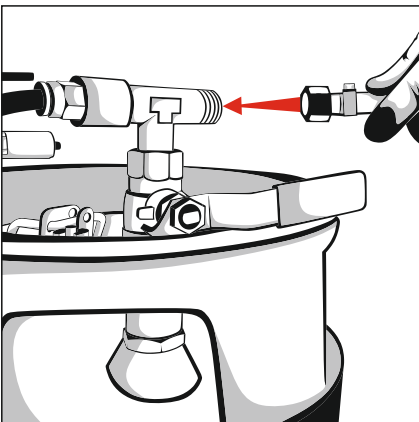


7. Connect the material hose to the tank.

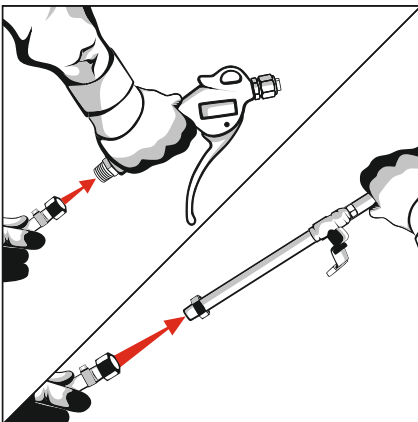


8. Attach the material hose to the gun or lance.

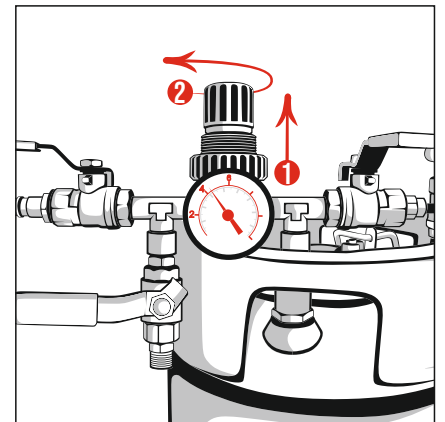


9. Set the tank pressure to a value within the range of 4 - 4.5 BAR.

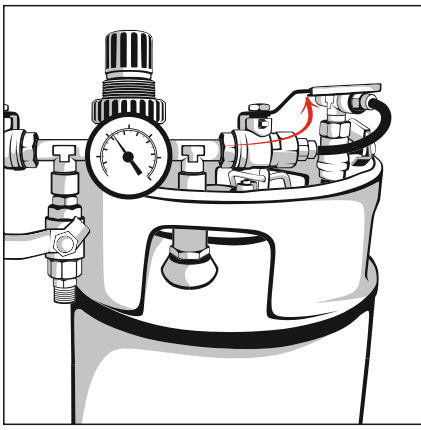

10. Open the ball valve for foam control.

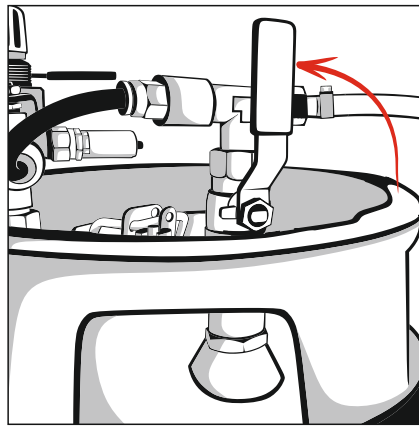

11. Open the ball valve

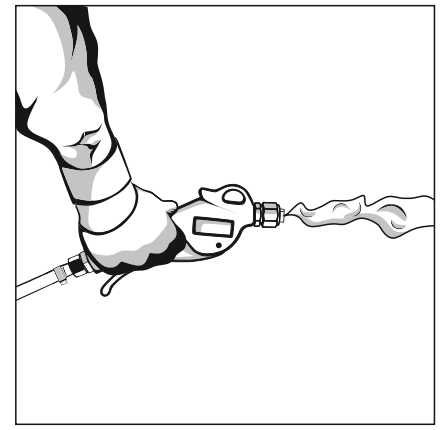

12. You can start working.